


Installation Method

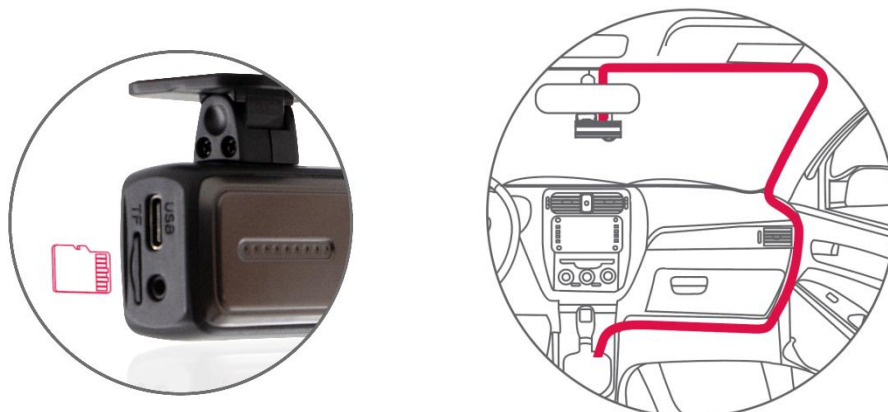

- (1) First turn off the car engine, insert the TF card into the device, and then determine the installation location of the device, which is usually installed on the front and rear windshields of the car.

【Note】 Please use TF memory cards produced by regular manufacturers. You can choose memory cards with a capacity of 8GB-256GB and read/write speeds of no less than U1/Class10 level.

- (2) Clean the mounting location and make sure the surface is clean and dust-free.
- (3) Attach the static sticker to the windshield
- (4) Fix the bracket of the car recorder on the static sticker, and adjust the angle and direction.
- (5) Plug the car charger into the car USB port, insert the C type cable into the Dash camera from one side and other side plug USB cable into car charger socket.
- (7) After the installation is complete, launch the software and make settings such as time, video quality, recording time, and so on.
- (8) Start the vehicle and check that the equipment is working properly.

【Note】 When the device is installed correctly, the system works to indicate the signal; The device starts to enter the working state and the display shows the video recording in progress.

Caution

Before using this product, please read all precautions and online guides to ensure proper and safe use.

- (1) Please install this product correctly. We are not responsible for any damages caused by installation reasons other than the quality of the product itself.
- (2) Please use the car charger head, power cord, and other accessories that come standard with this product, to avoid the use of malfunctions brought about by inconsistent specifications. We are not responsible for any damage caused by using non-standard car charger heads and power cords.
- (3) Keep this product away from strong magnetic fields, which may cause damage to the product.
- (4) Prohibited to use this product at high temperatures above 75°C or low temperatures below -20°C.
- (5) Please use this product as permitted by law.

Warranty terms

- (1) Merchandise is warranted for one year from the date of departure of the shipment.
- (2) Warranty service is valid only under normal use within the warranty period. If the product is not used according to the requirements of the instruction manual caused by the damage (special attention to the occurrence of water, drop, and other abnormal use is not covered by the warranty).
- (3) The warranty does not cover damages caused by the use of unauthorized and inferior communication cables, equipment failures, and damages caused by force majeure factors such as flood, fire, lightning, earthquake, and other equipment failures and damages that are not caused by the equipment itself.